


Button assignments on the A-style PUMA X

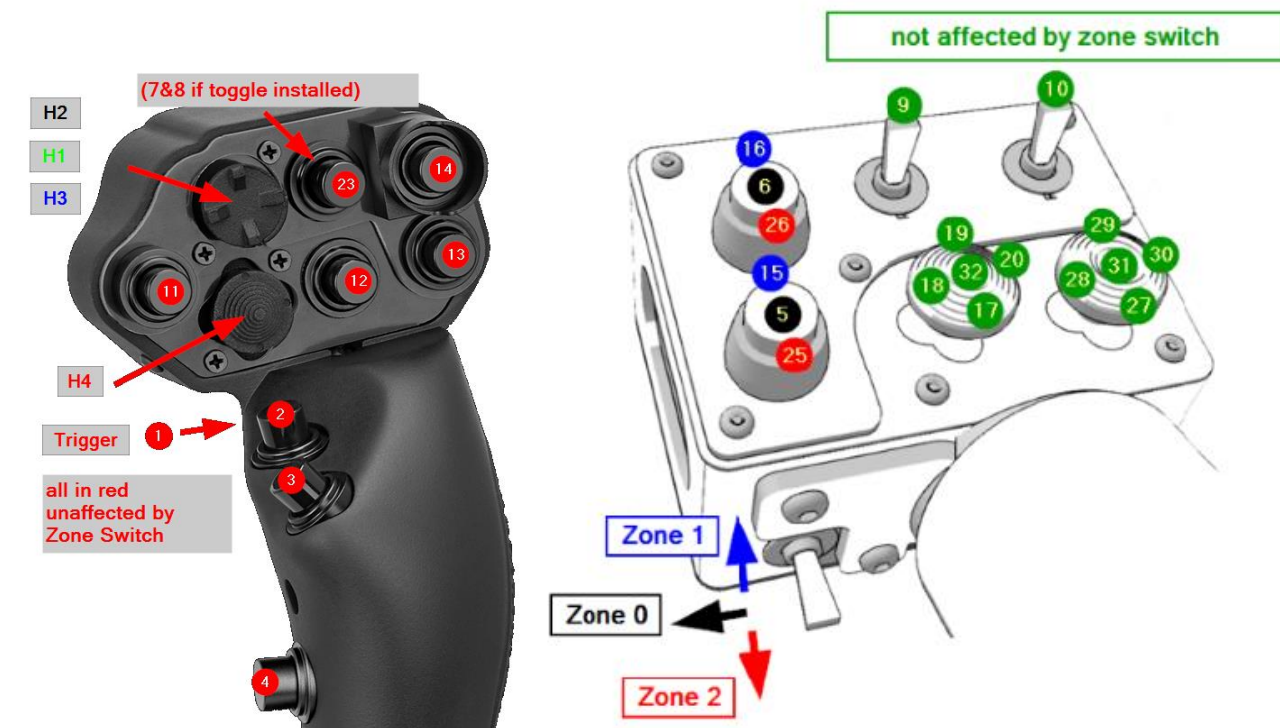

Only the top hat from the grip toggles to H2 and H3 when activating the Zone switch.
All other grip buttons are not affected by the Zone Switch.

Overview

- 1-4 grip handle buttons and trigger
- 5-6 collective buttons Zone 1
- 7-8 reserved grip toggle Nr1
- 9-10 collective toggle
- 11-14 grip buttons
- 15-16 collective buttons Zone 2
- 17-20 collective left hat
- 21-22 reserved grip toggle Nr2
- 23-24 optional buttons grip
- 25-26 collective buttons Zone 3
- 27-30 collective right hat
- 31-32 pushdown collective hats
- 33-36 silent mode – zone confirmation pulse (not shown by the Windows game controller)