


**Works for serial numbers XXXCXXX and upwards.**

Purchase Date ~November 1st, 2023, and onwards.


Navigate to our website download section.

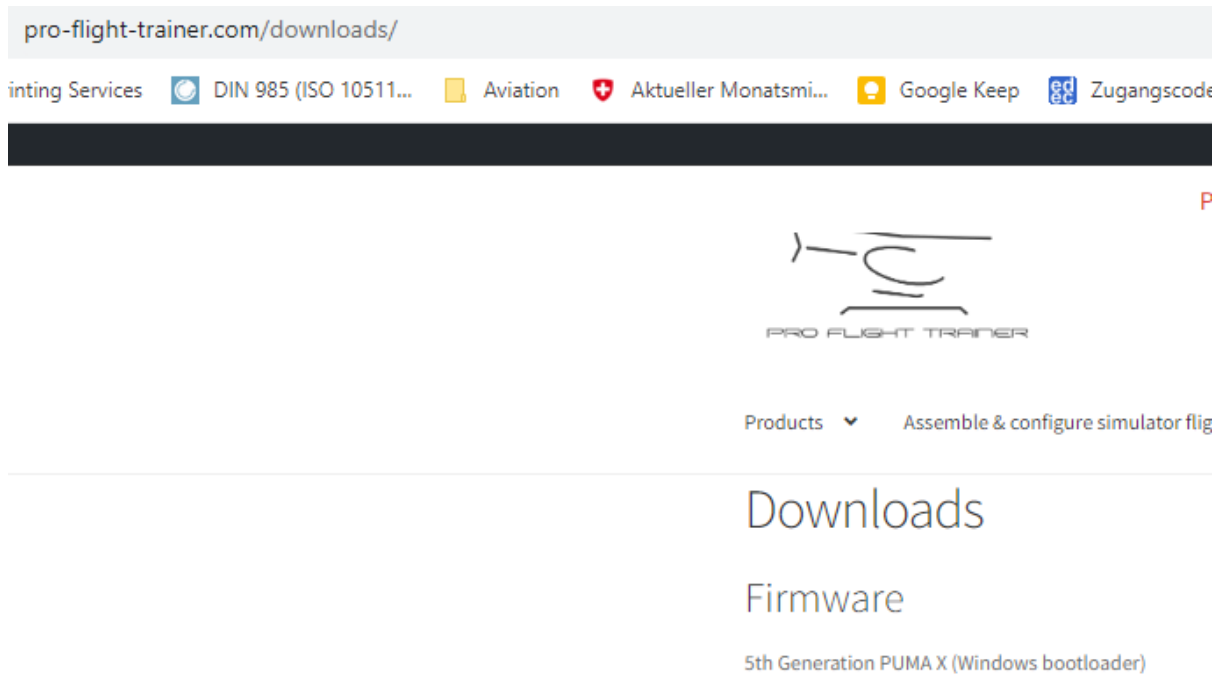


Download the Bootloader ZIP File.

You might get a browser warning. Simply select download anyway.

Example:

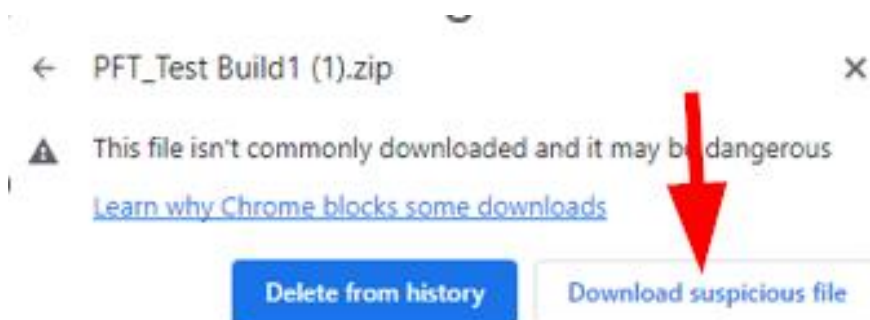


Once it is downloaded, extract the files.

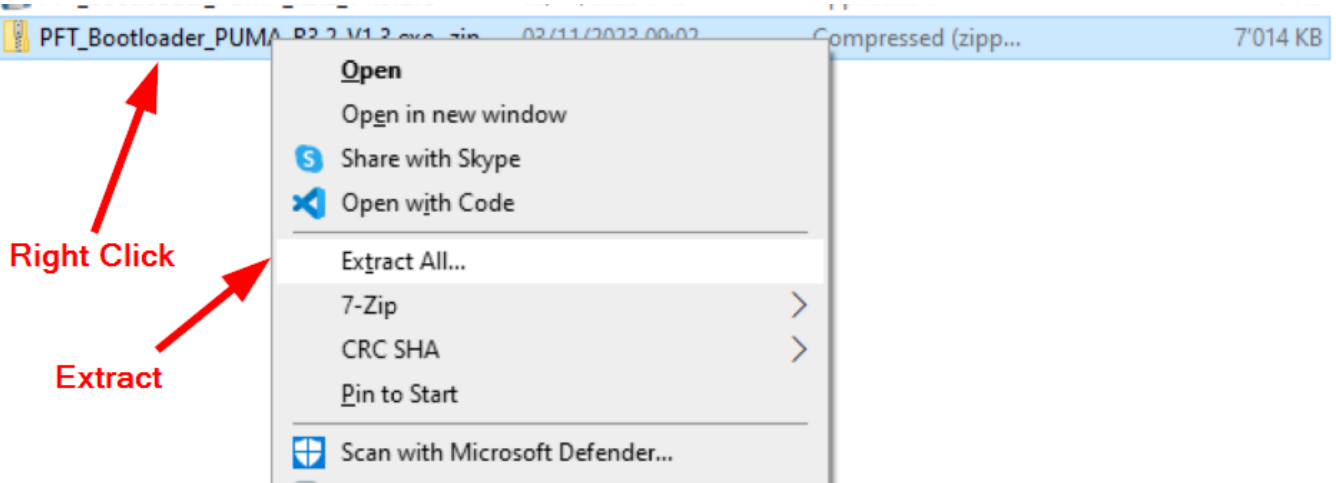


Plug the PUMA X to your PC.

Run the PFT Bootloader File. Windows or your antivirus software might prevent you from running the Bootloader. Disable your antivirus software or choose to “run despite the warning” or run as Administrator.

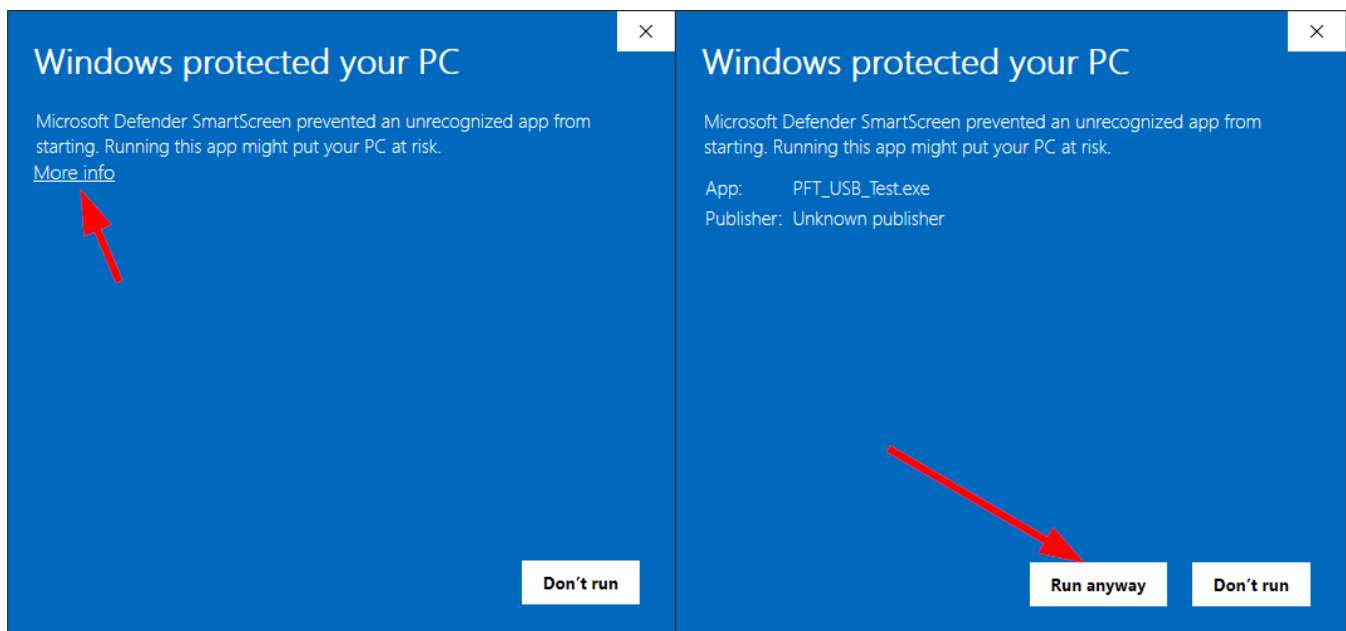

If the process is successful, you will see the following command screen.

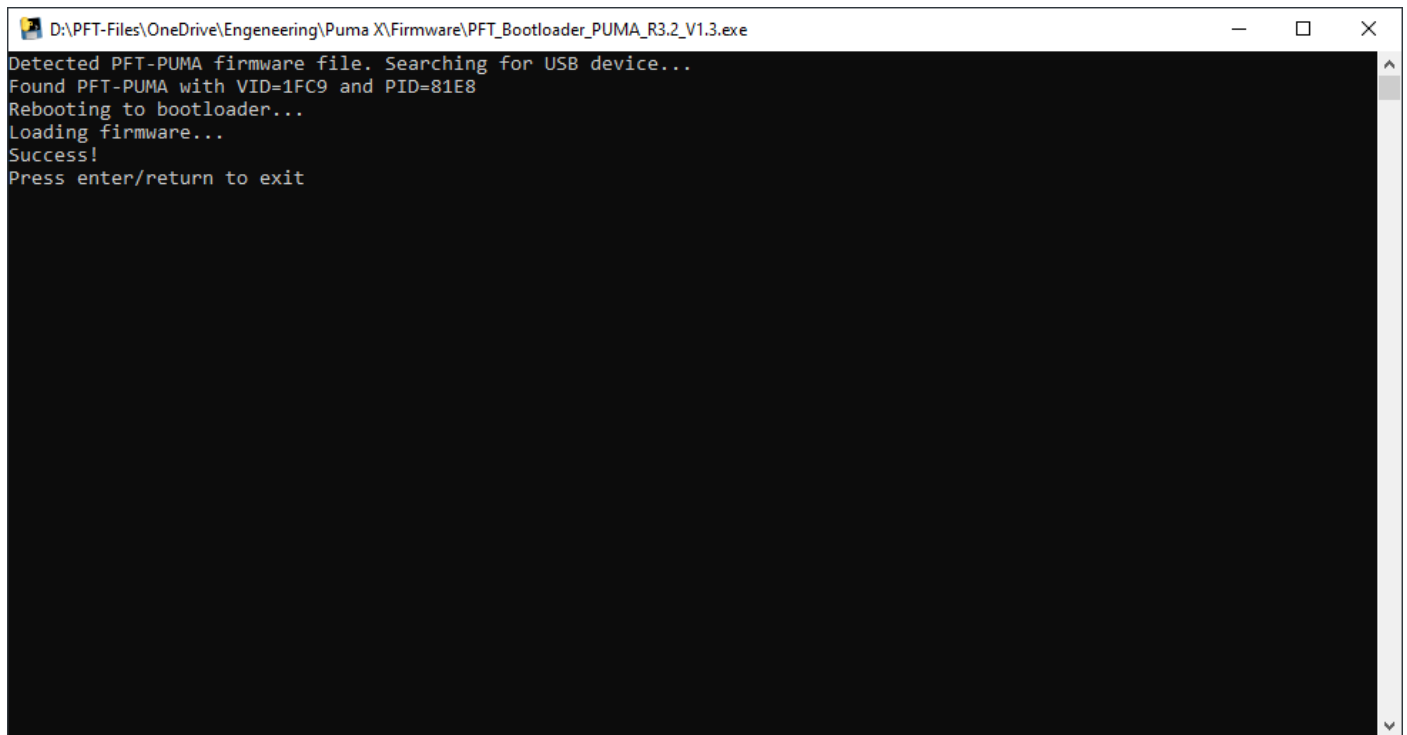

```
D:\PFT-Files\OneDrive\Engeneering\Puma X\Firmware\PFT_Bootloader_PUMA_R3.2_V1.3.exe
Detected PFT-PUMA firmware file. Searching for USB device...
Found PFT-PUMA with VID=1FC9 and PID=81E8
Rebooting to bootloader...
Loading firmware...
Success!
Press enter/return to exit
```